


Traditional systems - Angle standing seam (horizontal design)

ASS H 1.1.05 Horizontal section.

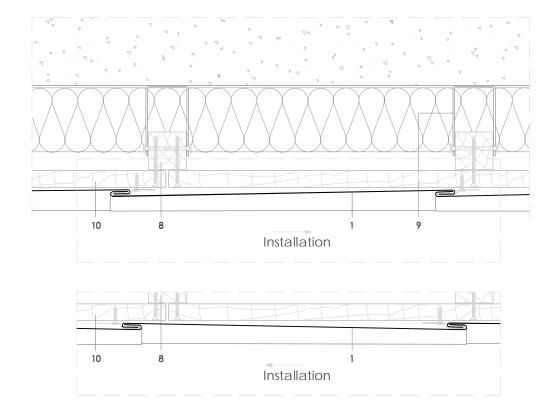

All dimensions are indicative unless specified on the drawing Sheet thickness may be exaggerated for clarity

Scale 1/5

Notes:

- Consult local or national regulations to size the ventilation gap. In their absence, an air gap of at least 20mm is recommended.
- The supporting structure is shown composed of wooden battens fixed to the main structure using wall brackets, with low density insulation between battens.
- If high density insulation slabs or boards are used, the battens must be fixed entirely in front of the insulation.
- 1. elZinc® cladding
- 2. Membrane
- 3. Structural underlay
- 4. Folded galvanised steel profiles

elZinc®

- 5. elZinc® perforated sheet
- 6. elZinc® retention profile
- 7. Insulation
- 8. Wooden batten
- 9. Wall bracket
- 10. Substrate








Traditional systems - Angle standing seam (horizontal design)

ASS H 1.1.05 Horizontal section.

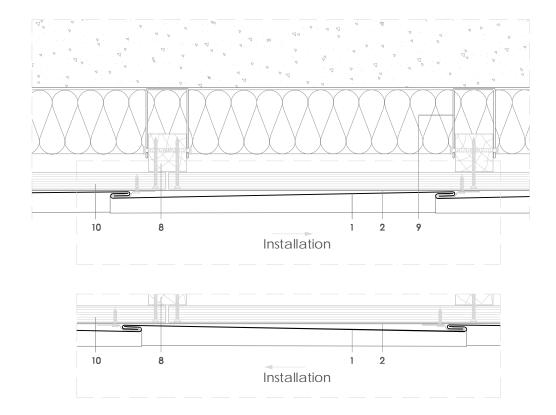

All dimensions are indicative unless specified on the drawing Sheet thickness may be exaggerated for clarity

Scale 1/5

Notes:

- Consult local or national regulations to size the ventilation gap. In their absence, an air gap of at least 20mm is recommended.
- The supporting structure is shown composed of wooden battens fixed to the main structure using wall brackets, with low density insulation between battens.
- If high density insulation slabs or boards are used, the battens must be fixed entirely in front of the insulation.
- 1. elZinc® cladding
- 2. Membrane
- 3. Structural underlay
- 4. Folded galvanised steel profiles

elZinc®

- 5. elZinc® perforated sheet
- 6. elZinc® retention profile
- 7. Insulation
- 8. Wooden batten
- 9. Wall bracket
- 10. Substrate

