


Traditional systems - Angle standing seam (horizontal design)

ASS H 7.2.02 Horizontal window section - non-vented sill.

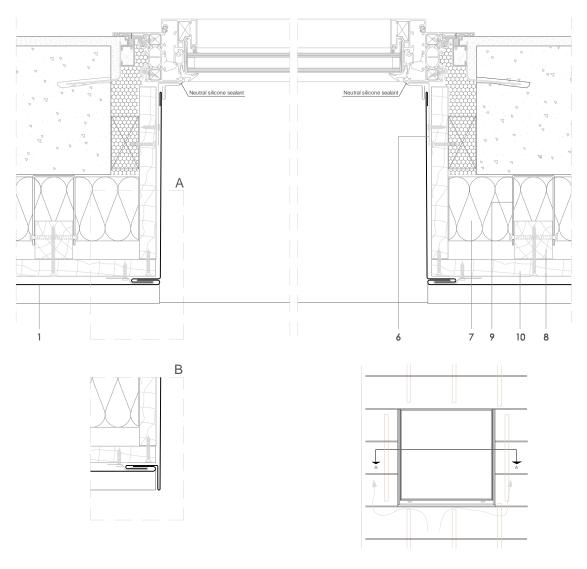

All dimensions are indicative unless specified on the drawing Sheet thickness may be exaggerated for clarity

Scale 1/5

Notes:

- Used for narrow windows where ventilation can flow around the window. For wide windows with an vented sill, see ASS H 7.1.01. y ASS H 7.1.02.
- 'A' shows a simple jamb.
- 'B' shows an alternative jamb which covers ends of standing seams.
- The elevation corresponds to windows lined up with horizontal joints.
- For vertical section see ASS H 7.2.01.
- Generic structural details are given for indicative purposes only.
- Window sections reproduced courtesy of Technal.

- 1. elZinc® cladding
- 2. Membrane
- Structural underlay 3.
- 4. Folded galvanised steel profiles

elZinc®


- 5. elZinc® perforated sheet
- 6. elZinc® retention profile
- 7. Insulation
- Wooden batten 8.
- 9. Wall bracket
- 10. Substrate





Traditional systems - Angle standing seam (horizontal design)

ASS H 7.2.02 Horizontal window section - non-vented sill.

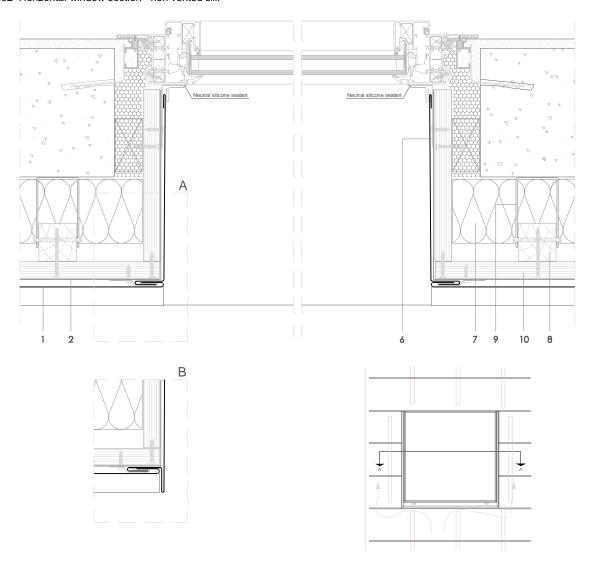

Scale 1/5

All dimensions are indicative unless specified on the drawing Sheet thickness may be exaggerated for clarity

Notes:

- Used for narrow windows where ventilation can flow around the window. For wide windows with an vented sill, see ASS H 7.1.01. y ASS H 7.1.02.
- 'A' shows a simple jamb.
- 'B' shows an alternative jamb which covers ends of standing seams.
- The elevation corresponds to windows lined up with horizontal joints.
- For vertical section see ASS H 7.2.01.
- Generic structural details are given for indicative purposes only.
- Window sections reproduced courtesy of Technal.

- 1. elZinc® cladding
- 2. Membrane
- Structural underlay 3.
- 4. Folded galvanised steel profiles

elZinc®

- 5. elZinc® perforated sheet
- 6. elZinc® retention profile
- 7. Insulation
- Wooden batten 8.
- 9. Wall bracket
- 10. Substrate

