


DLSS 1.2.2.01 Turned down upstand.

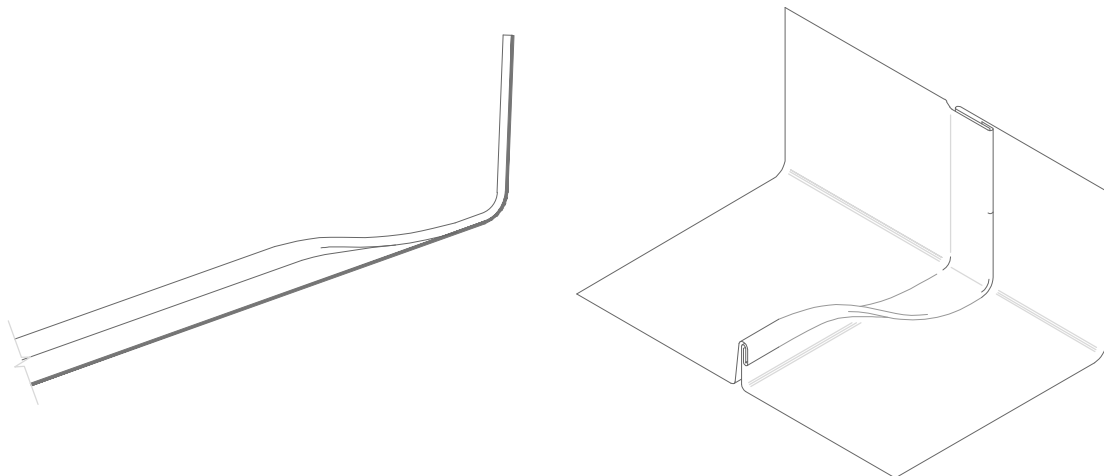

All dimensions are indicative unless specified on the drawing  
Sheet thickness may be exaggerated for clarity

Scale 1/4

Notes:

- Used for short - medium upstands (to batten ridge batten hip, vented ridge etc).
- A space behind the upstand equivalent to its height is required to form this detail.
- The upstand fold at the seam should have a good radius.
- In cooler weather, it is good practice to warm up the zinc before turning up.

1. elZinc® cladding
2. Membrane
3. Structural underlay
4. Folded galvanised steel profiles
5. elZinc® perforated sheet
6. elZinc® retention profile
7. Insulation
8. elZinc® hung gutter
9. Gutter clip
10. Gutter bracket
11. elZinc® clip
12. Substrate